

## **Programming Mode**

1. Power on, and red LED illuminates.
2. Type ★ Master code # (Default code 123456). Green LED illuminates for 0.5 secs to show acceptance.
3. LED begins to flash red to programming mode is active

## **Changing Master Code**

1. Enter programming mode
2. Press 0, LED illuminates orange constantly.
3. Enter new code followed by #. Green LED illuminates for 0.5 secs to show accepted.
4. LED illuminates orange constantly.
5. Repeat new code followed by #. . LED illuminates green for 0.5 secs to show accepted. LED illuminates orange constantly.
6. LED begins to flash red to programming mode is active
7. Type ★ to exit programming mode

## **Adding User Code**

1. Enter programming mode
2. Press 1, LED illuminates orange constantly.
3. Enter USER ID 0-989 followed by #. Green LED illuminates for 0.5 secs to show accepted. LED illuminates orange constantly
4. Type new code followed by #. LED illuminates green for 0.5 secs to show acceptance. LED illuminates orange constantly
5. Press # again. LED illuminates green for 0.5 secs to show acceptance.
6. LED begins to flash red to programming mode is active
7. Type ★ to exit programming mode

## **Door release – code must be typed from standby mode followed by #**

## **Change Relay Time**

1. Enter programming mode.
2. Press 4, orange LED illuminates constantly.
3. Type value 1-99. The default is 5 seconds. (1=50ms. 0=Latching/Toggle.)
4. Press #, Green LED illuminates for 0.5 secs to show accepted.
5. LED begins to flash red to programming mode is active.

## **Deleting User Code**

1. Enter programming mode.
2. Press 2, orange LED illuminates constantly.
3. Enter User ID and press #. Green LED illuminates for 0.5 secs to show acceptance.
4. Press # again.
5. LED begins to flash red to programming mode is active.

## **Restore Factory Settings**

1. Remove power from the keypad
2. Press and hold ★ power on the keypad
3. The sounder will beep twice. Release the ★ and the sounder will beep again. No user codes will be erased. Only the master code and settings will be reset.